13” Rotor Adapter Instructions 1.0.0

Part #. 1101-0009, 1101-0010, 1102-0009, 1102-0010

Items Included

1. **Caliper Mount**
2. **4– 10x1.5x35mm Bolts**
3. **2-.01, 2-.03, 2-.05 mm shims**

Tools Needed

1. **8MM Allen Socket**
2. **Blue Thread Locker**
3. **Torque Wrench Ft Lbs**

1. Remove items form package.
2. Taking the mount using 2of the supplied 10-1.5x35mm Allen bolts, Install the mount on the fork leg (using blue thread locker on threads of bolts) as shown in (Fig 1).

3. Take the brake caliper placing it on the back side of the mount. Insert the remaining 2 10-1.5x35mm Allen bolts (After applying blue thread locker). (Fig 2)

4. Finger tighten caliper to mount.

5. Now look down the center of the rotor and check to see if it is centered in the caliper. (Fig 3)

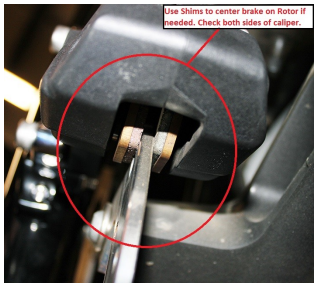

6. Using supplied Shims insert them between the caliper and mount as needed to center caliper on the rotor as needed. (Fig 4)
7. After caliper is centered. Now torque to 25 Ft Lbs using the 8mm Allen socket.

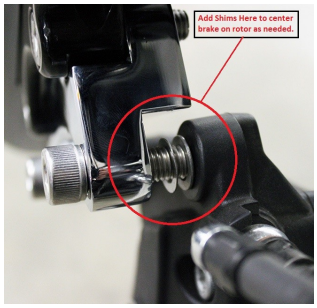

Thank You

JARz Products

2413 West 5th St.

Sioux Falls SD 57104

www.jarzproducts.com